


FULL LENGTH THREADS
 1/4-28 UNF FOR MODELS AFTER 1968
 1/4-26 CEI FOR EARLIER MODELS

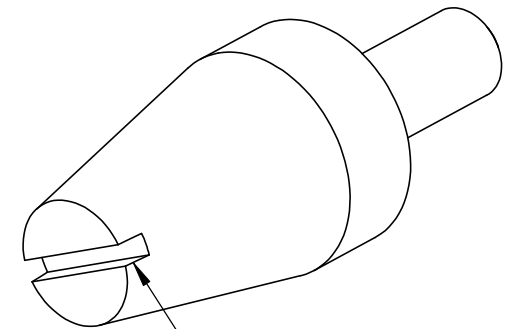

SCREWDRIVER SLOT TO
 AID INSTALLATION

RFW

NOTES:

1. MATERIAL: FREE MACHINING BRASS
2. FINISH: AS IS
3. THIS TOOL AIDS IN THE INSTALLATION OF THE TIMING COVER ON ALL TRIUMPH, BSA, AND NORTON TWINS AS DRAWN FROM THE ORIGINAL TRIUMPH D486 WORKSHOP TOOL

UNLESS OTHERWISE SPECIFIED:		NAME	DATE	GABMA Greater Atlanta British Motorcycle Assoc.			
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±		DRAWN	RFW 2/12/10			POINTS OIL SEAL PROTECTOR TOOL	
INTERPRET GEOMETRIC TOLERANCING PER:		CHECKED		SIZE	DWG. NO.		
MATERIAL		ENG APPR.		B	D486		
FINISH		MFG APPR.					
DO NOT SCALE DRAWING		Q.A.		SCALE: 2:1			
		COMMENTS:		SHEET 1 OF 1			